

UHF CARD



UHF Cards are used in long distance card reader systems, personnel management, material management and systems that manage vehicle passages. When used in barrier systems, it is placed on the vehicle windshield or the UHF antenna is shown and the transition is made.

FACTORY

Address: Sincan Organize Sanayi Bölgesi,
Erkunt Cd. No: 20 06930 Sincan / Ankara
Phone: +90 (312) 267 56 87 **Fax:** 0 (312) 267 56 99
satis@makim.com.tr

ANKARA SALES OFFICE

Address: Batı Sitesi Mah. Gersan, 2307 Sk/3.Cad.
No:16 06970 Ergazi / Ankara
Phone: +90 (312) 257 02 52 **Fax:** 0 (312) 257 02 55
pazarlama@makim.com.tr

BRANCH

Address: Perpa Ticaret Merkezi, B Blok
Kat: 7-8 No: 987-989 Şişli İstanbul
Phone: +90 (212) 210 29 41 **Fax:** 0 (212) 210 68 15
sube@makim.com.tr

WAREHOUSE AND TECHNICAL DELIVERY

Address: Perpa Ticaret Merkezi, B Blok
Kat: 1-2 No:57 Şişli İstanbul
Phone: +90 (212) 210 29 41 **Fax:** 0 (212) 210 68 15
sube@makim.com.tr